



200 SERIES TWIN FAN UPGRADE KIT



W A R N I N G

WARNING: Failure to follow this procedure will void your warranty.

- Do not use this product in any other motor vehicle for which it is not designed.
- Do not use any other mounting location / method other than described in this instruction.
- It is advisable to seek assistance of another person when installing this product.
- Do not repair or modify this product and / or its mounting bracket in any way - repair or modification may affect proper operation of the vehicle or cause destruction of property.
- Be sure to clean and remove any loose debris before removing pipe work as debris entering the engine could be detrimental to the engine and or components

REMOVE THE FACTORY INTERCOOLER COVER AND CUT OUT THE CENTRAL SECTION AS SHOWN.

FIT THE TWIN FAN BRACKET AND FANS USING THE 4 BOLTS SUPPLIED.

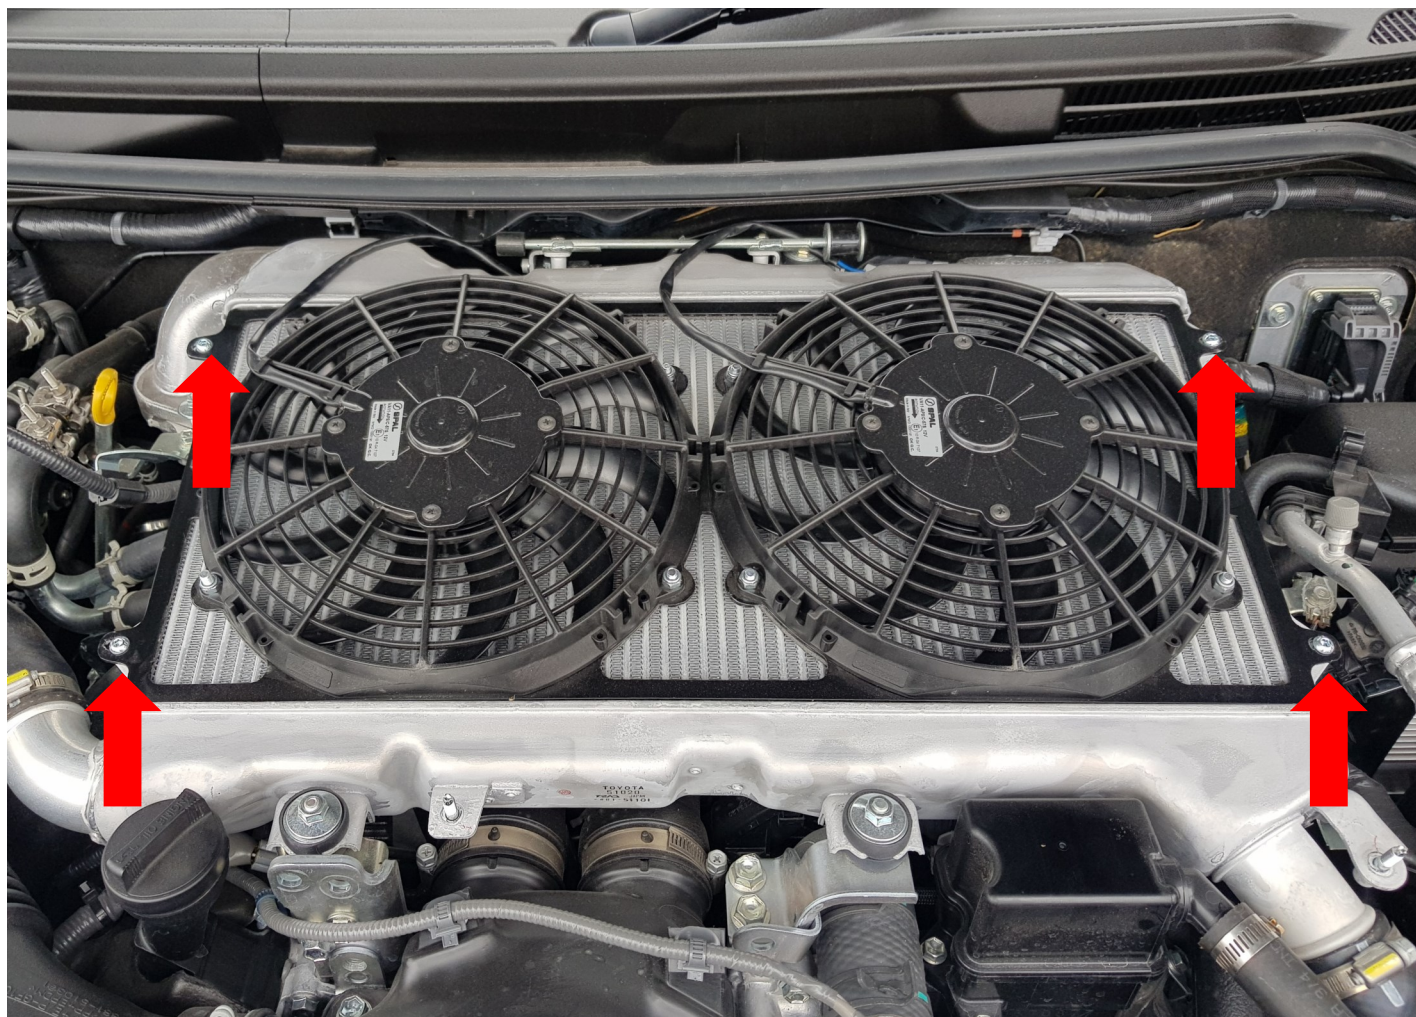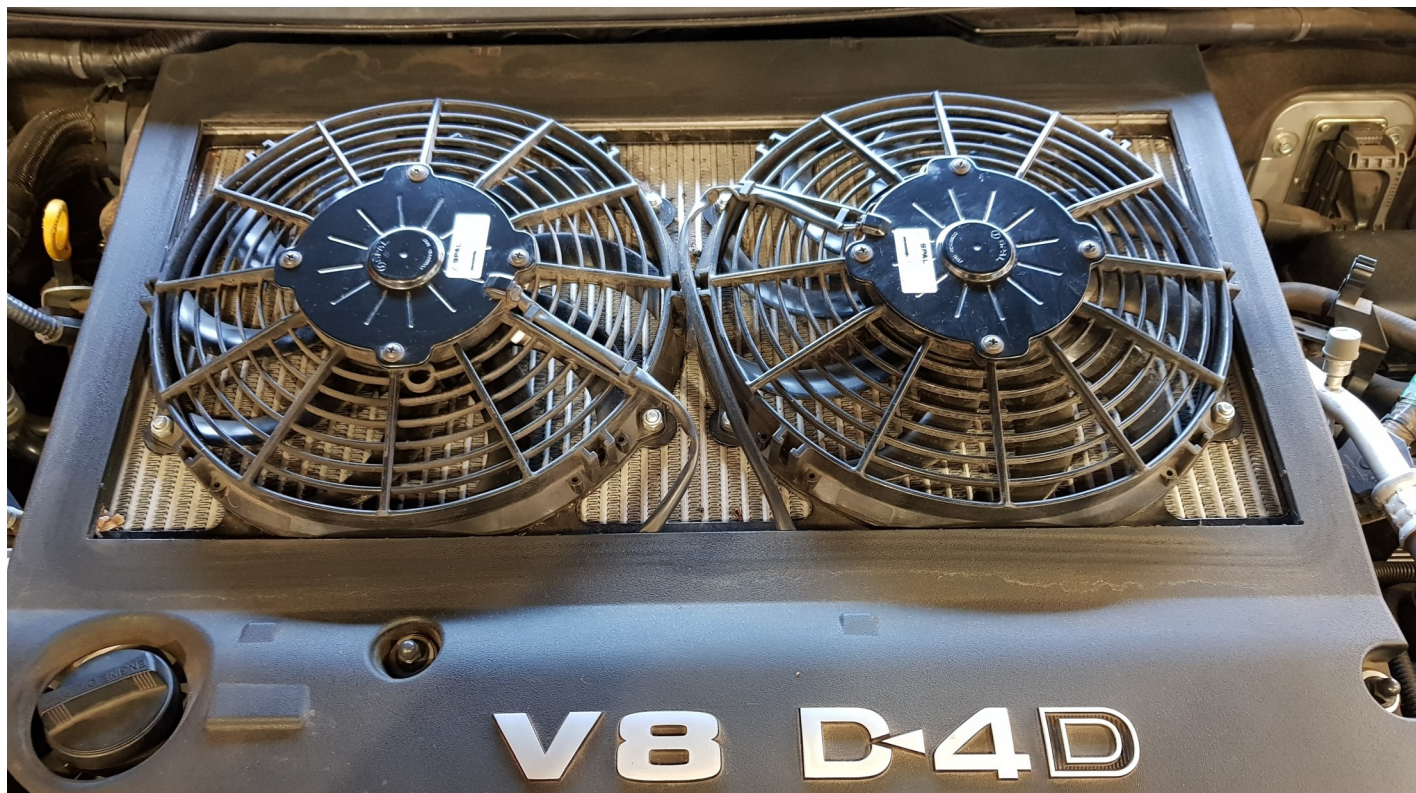

RUN THE FAN WIRES TO THE REAR OF THE INTERCOOLER AND REINSTALL FACTORY COVER.
WIRE FANS AS SHOWN BELOW USING THE SUPPLIED WIRING LOOMS AND ADD A FUSE TO
PICK UP IGNITION FROM THE FUSE BOX.

ONCE ALL WIRING IS COMPLETE CHECK OPERATION OF THE FANS.

